





# Multicom® 4 Port Fiber Optic Node Connector Installation Instructions

Thank you for purchasing a Multicom 4 Port Fiber Optic Node. The unit ships with four (4) F-Connectors in a bag. To install the F-Connectors to the node, please follow the instructions below:

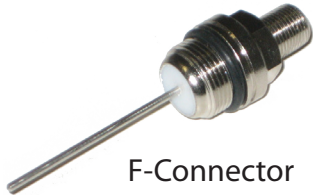


1. Remove the plastic plugs from the F-Connector ports on the sides of the node and discard.

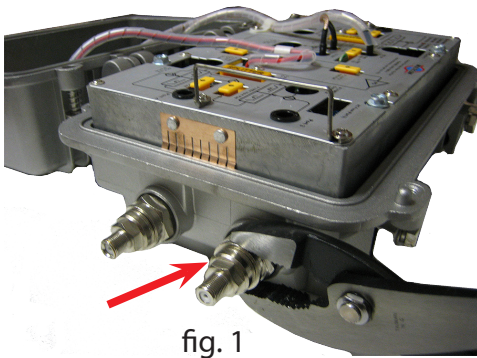


2. Open the unit

3. Insert the enclosed F-Connectors into the ports and tighten with a wrench or pliers (fig. 1)

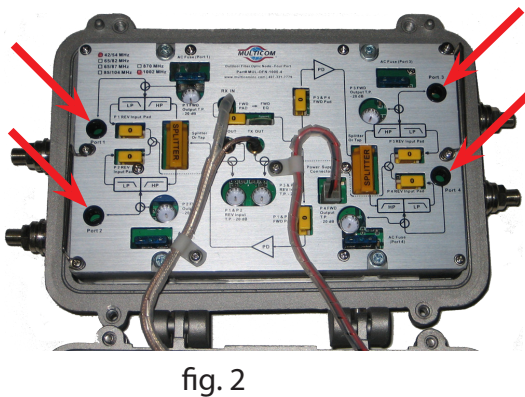

4. There are four holes that allow access to the four screws that tighten on the center conductor of the F-Connector. The holes are labeled, Port 1, Port 2, Port 3 and Port 4 (fig. 2)

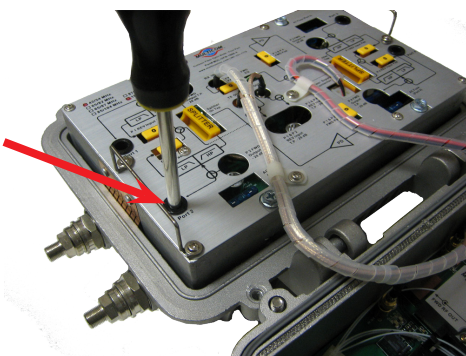

5. Using a Phillips-head screwdriver, tighten the set screws onto the F-Connector center conductors securely (fig. 3). Do not overtighten.

The F-Connector installation is now complete

Part# MUL-OFN-1000-4

[www.multicominc.com](http://www.multicominc.com)

407-331-7779  
800-423-2594