

Mode	Modo		BOSS OFF (Passive)	BOSS ON (Active)
Operating band	Banda de trabajo	MHz	470 - 698 (CH14 - CH51)	
Gain	Ganancia	dBi	17	32 max.*
Output level	Nivel de salida		----	Auto*
Noise figure	Figura de ruido	dB	----	1.2 typ
Power supply	Tensión de limentación	Vdc	0	12 - 24
Consumption	Consumo	mA	----	40 max
Beamwidth	Ancho de haz	°	30	
Wind load	Carga al viento	N	120 (@ 80 miles/h) 165 (@ 93 miles/h)	

*The gain is automatically adjusted according to the output level / La ganancia varía automáticamente en función del nivel de salida.

Safety Instructions:

LIGHTNING PROTECTION

- ◆ If installed outdoors, be sure the antenna system is grounded so as to provide protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code ANSI/NFPA70, or CSA C22.1 sections 10, 16, and 54, of the Canadian Electrical Code, provide information with respect to proper grounding of the mast and supporting structure, grounding of the antenna lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode (see figure and instructions).
- ◆ Mount the lightning arrester or 75 ohm coaxial grounding block as close as possible to where the 75 ohm coaxial cable downlead enters the house.
- ◆ The ground wires for both the mast and the downlead should be copper or aluminum wire, number eight (8) or larger.
- ◆ The downlead wire from the antenna to the lightning arrester and the mast ground wire should be secured to the house, spaced from four (4) to six (6) feet apart.
- ◆ In the case of a "ground up" antenna installation it may not be necessary to ground the mast if the mast extends four or more feet in the earth. Consult a TV serviceman for the proper depth in your location.

WARNINGS

- ◆ To prevent fire or shock hazard, do not expose the included power supply to rain or moisture.
- ◆ Installation of off-air antennas near power lines is dangerous. For your safety, follow the installation instructions.
- ◆ Any alteration or modification to the product or usage not in accordance with product instructions voids the warranty.


Antenna Selector

This antenna works in the following zone(s).

© Consumer Electronics Association

See the TV Antenna Selector Map to find the zone in which you live.

Example of antenna grounding as per National Electrical Code, ANSI/NFPA 70

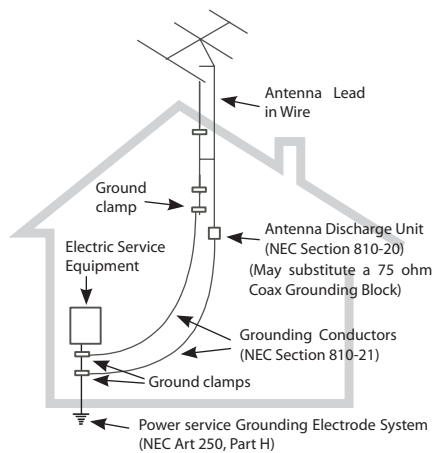

NEC - National Electrical Code

